


# W-987 User Settings

## Key:

     = Preferred Settings

## Set Up Menu Settings

- This menu allows you to choose the units of measurement along with rounding weight amounts
- Start at Home Screen (see image below)

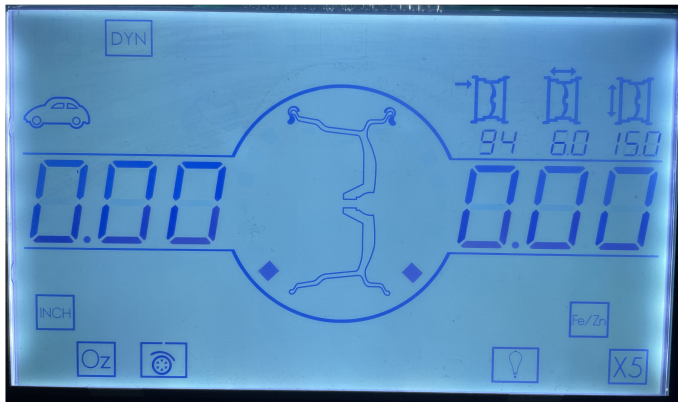

- Press F
- Press DIA+ twice
- Display should say SET UP
- Press F twice
  - **Gr TELLS MACHINE IF GRAMS OR OUNCES WILL BE USED** (DIA +/- to change)
    - ON = Grams will be used, OFF = Ounces will be used
- Press F
- Press DIA+
- Press F
  - **inC TELLS MACHINE IF WHEEL DIMENSIONS WILL BE IN INCHES OR MM** (DIA +/- to change)
    - ON = Inches will be used, OFF = MM will be used
- Press F
- Press DIA+
- Press F
  - **nAt TELLS MACHINE WHEEL WEIGHT MATERIAL** **Fe (Iron) --OR-- Pb (Lead)** (DIA +/- to change)
    - Fe = Iron or Zinc weights, Pb = Lead Weights
- Press F
- Press DIA+
- Press F
  - **FnE is WEIGHT ROUNDING PREFERENCE** (DIA +/- to change)
    - -1 = nearest 0.10 oz, -5 = nearest 0.25 oz

- Press F
- Press Stop until you return to home screen

### Parameter Settings

- This menu will allow you to change the balancers features and functionality
- Press F
- Press DIA+ three times
- Press F twice
  - **tHr THRESHOLD SETTING** (DIA +/- to change)
    - **Set to "07" for best results**
- Press F
- Press DIA+
- Press F
  - **SPn SHOWS HOW MANY SPINS THE BALANCER HAS COMPLETED**
- Press F
- Press DIA+
- Press F
  - **GAU TELLS MACHINE TO USE AUTOMATIC DISTANCE AND DIAMETER ARM** (DIA +/- to change)
    - **ON = Auto Distance Arm will be used**, OFF = Auto Distance Arm will not be used
- Press F
- Press DIA+
- Press F
  - **LAR TELLS MACHINE IF AUTOMATIC WIDTH RULER IS INSTALLED** (DIA +/- to change)
    - **ON = Auto Width Ruler is Installed**, **OFF = Auto Width Ruler is not installed**
- Press F
- Press DIA+
- Press F
  - **iLL TELLS MACHINE PREFERENCE OF LED LIGHT** (DIA +/- to change)
    - **ON = Light will be used**, OFF = Light will not be used
- Press F
- Press DIA+
- Press F
  - **LAS TELLS MACHINE PREFERENCE OF LASER LIGHT** (DIA +/- to change)
    - **ON = Laser will be used**, OFF = Laser will not be used.
- Press F
- Press DIA+
- Press F
  - **-P- TELLS MACHINE PREFERENCE OF HOOD START** (DIA +/- to change)
    - **ON = Hood Start on**, OFF = Hood Start off

- Press F
- Press DIA+
- Press F
  - **tiP TELLS MACHINE HOW FREQUENTLY TO ASK FOR CALIBRATION**  
(Press DIA +/- for ON/OFF, Press LAR +/- to adjust times)
    - ON = Machine will remind you to calibrate after specified spin amount, **OFF = Machine will not remind you to calibrate**
- Press F
- Press DIA+
- Press F
  - **ALF TELLS MACHINE IF YOU WANT TO DISABLE ALU MODES 2-5**  
(Press DIA +/- to change)
    - ON = ALU Modes 2-5 will be disabled, **OFF = ALU Modes 2-5 will be available to use**
- Press F
- Press DIA+
- Press F
  - **nAr AMERICAN MARKET / EUROPEAN MARKET, CHANGES DIS, DIA, LAR TO A, B, D** (Press DIA +/- to change)
    - **ON = AMERICAN MARKET**, OFF = EUROPEAN MARKET