


Tire Changer Wiring Diagram (W-893, W-894X, W-894XS, W-898X, W-898XS, W-M807, W-M806)

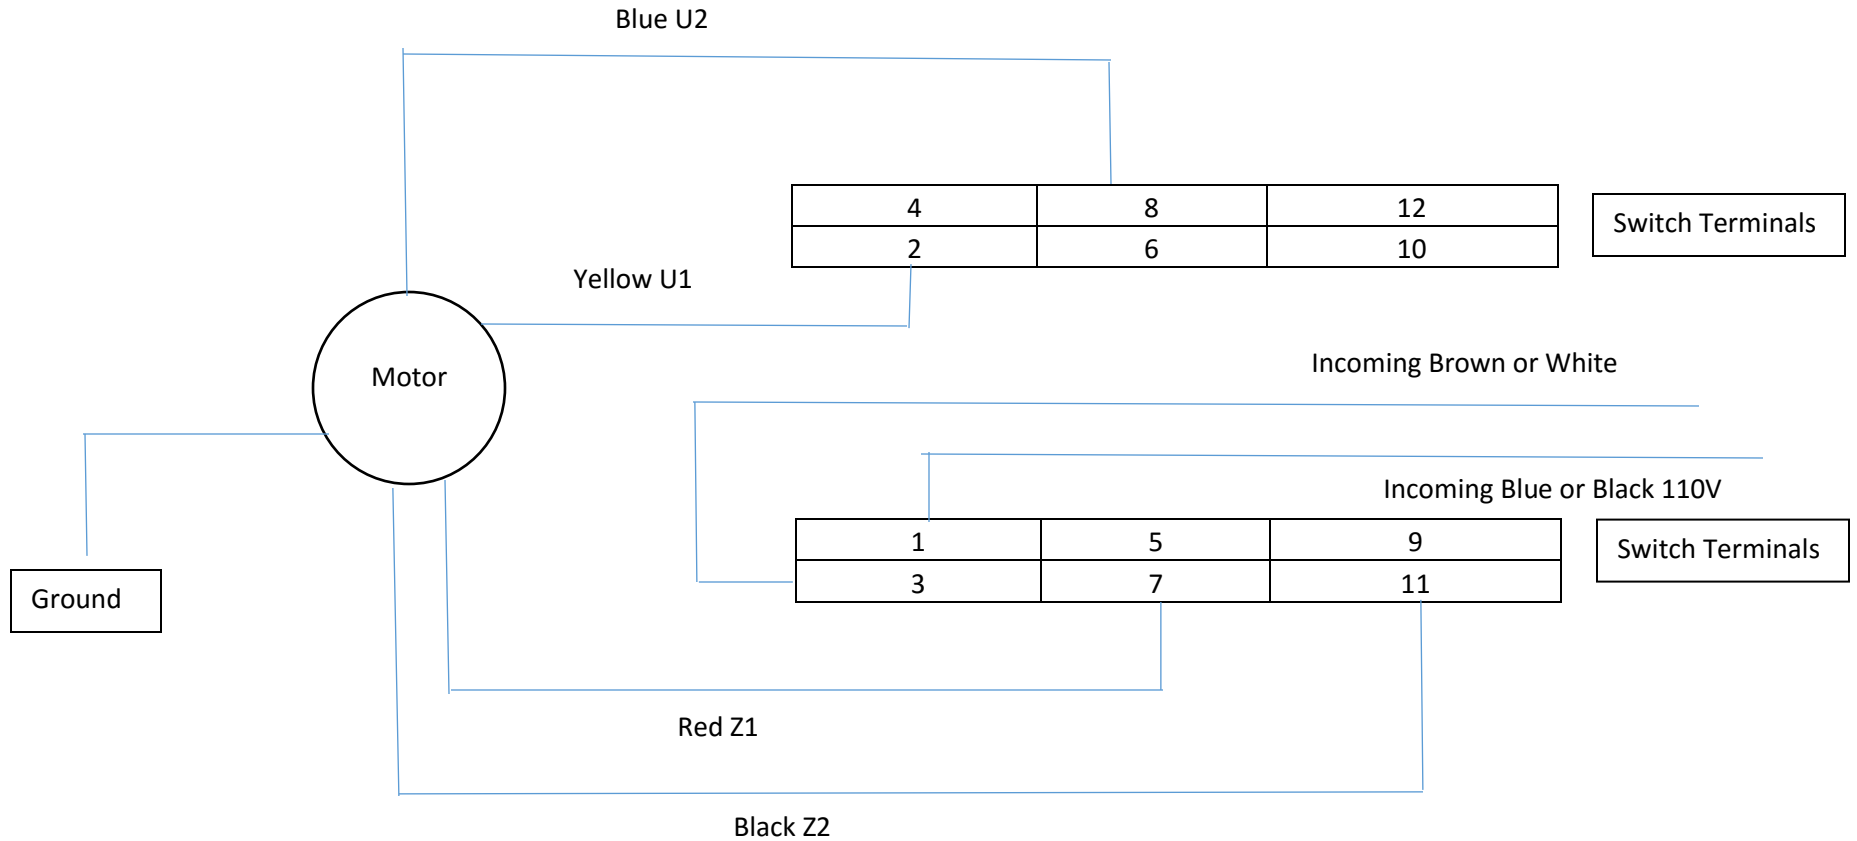

Clockwise Rotation - Pedal Down		
Terminal	Terminal	Voltage
1	7	120VAC
3	11	120VAC
1	8	120VAC
3	2	120VAC

Counterclockwise Rotation - Pedal Up		
Terminal	Terminal	Voltage
1	11	120VAC
3	7	120VAC
1	2	0 VAC
3	8	0 VAC

Neutral Pedal Position		
Terminal	Terminal	Voltage
1	3	120VAC
1	7	120VAC
1	8	120VAC
1	11	120VAC
1	2	120VAC