


W-BL175 Wheel Lift Parts Manual




WEAVER
E Q U I P M E N T


Please read this manual before operation

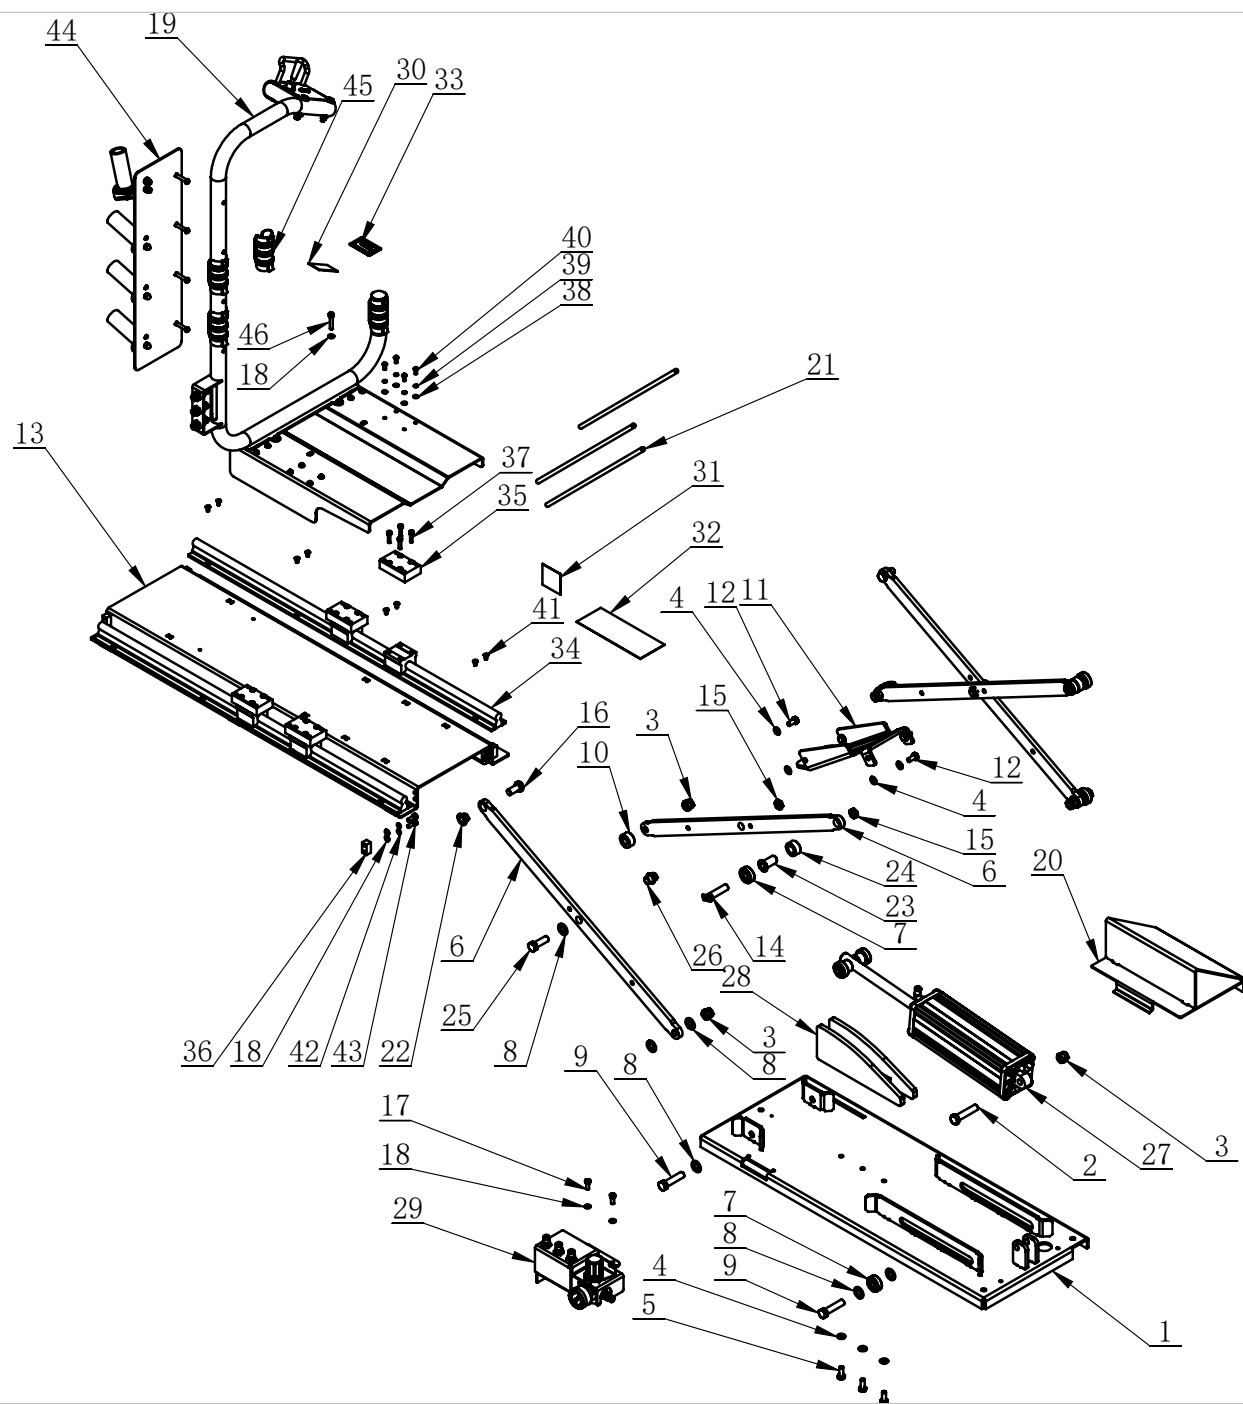


ITEM	PART. No	DESCRIPTION.	QT. Y
1	TB-J-0550000	BED PLATE	1
2	GB5783-M12×55	HEXANGULAR BOLT	1
3	GB889. 1-M12	LOCK NUT	5
4	GB95-8	FLAT WASHER	11
5	GB5783-M8×20	HEXANGULAR BOLT	3
6	TB-J-0500003	STUDDLE	4
7	GB276-6201	DEEP GROOVE BALL BEARINGS	4
8	GB95-12	FLAT WASHER	14
9	GB5783-M12×50	HEXANGULAR BOLT	4
10	TB-J-0500005	ROLLING	2
11	TB-J-0500004	SUPPORT BOARD	1
12	GB5783-M8×16	HEXANGULAR BOLT	4
13	TB-J-0540000A	LAYER BOARD WELDING	1
14	TB-J-0500100	CONNECTION	2
15	GB6172. 1-M12	HEXANGULAR THIN NUT	4
16	GB5783-M12×25	HEXANGULAR BOLT	2
17	GB5783-M6×16	HEXANGULAR BOLT	2
18	GB95-6	FLAT WASHER	11
19	TB-J-0520000A	ROLLING CAR	1
20	TB-J-0510000	SLOP SUBASSEMBLY	1
21	PU-0602400	JOINT GAS SOURCE	3
22	TB-J-0500006	SPACHER BUSH	2
23	TB-J-0500008	LONG SPACHER BUSH	2
24	TB-J-0500010	ROLLER	2
25	GB5783-M12×35	HEXANGULAR BOLT	2
26	TB-J-0500012	SPACER BUSH OF SUPPORT BOARD	2
27	TB-J-0570000	AIR CYLINDER GOUP	1
28	TB-J-0560000	RAIL WELDING	1
29	TB-J-0530000	REDUCING VALVE SUBASSEMBLY	1
30	446667	LABEL	1
31	451552	LABEL	1
32	TB-J-0800003	WARNING LABELS	1
33	TB-J-0500013	LABEL	1
34	TB-J-0590000	SLIDER AND GUIDE RAIL	2
35	TB-J-0500017	SLIDE PAD	4
36	TB-J-0500018	BAFFLE	4
37	GB70. 1-M5×20	INNER HEXA CYLINDRICAL SCREW	16
38	GB95-5	FLAT WASHER	16
39	GB93-5	STANDARD SPRING WASHER	16
40	GB70. 2-M5×12	INNER HEXA CYLINDRICAL ROUND HEAD SCREW	16
41	GB70. 3-M5×10	INNER COUNTERSUNK SCREW	16
42	GB93-6	STANDARD SPRING WASHER	6
43	GB70. 1-M6×16	SCREW	8
44	TB-J-0580000A	HANDLE SIDE PANEL ASSEMBLY	1
45	TB-J-0500019	PROTECTIVE TUBE	4
46	GB70. 1-M6×30	INNER HEXA CYLINDRICAL SCREW	1

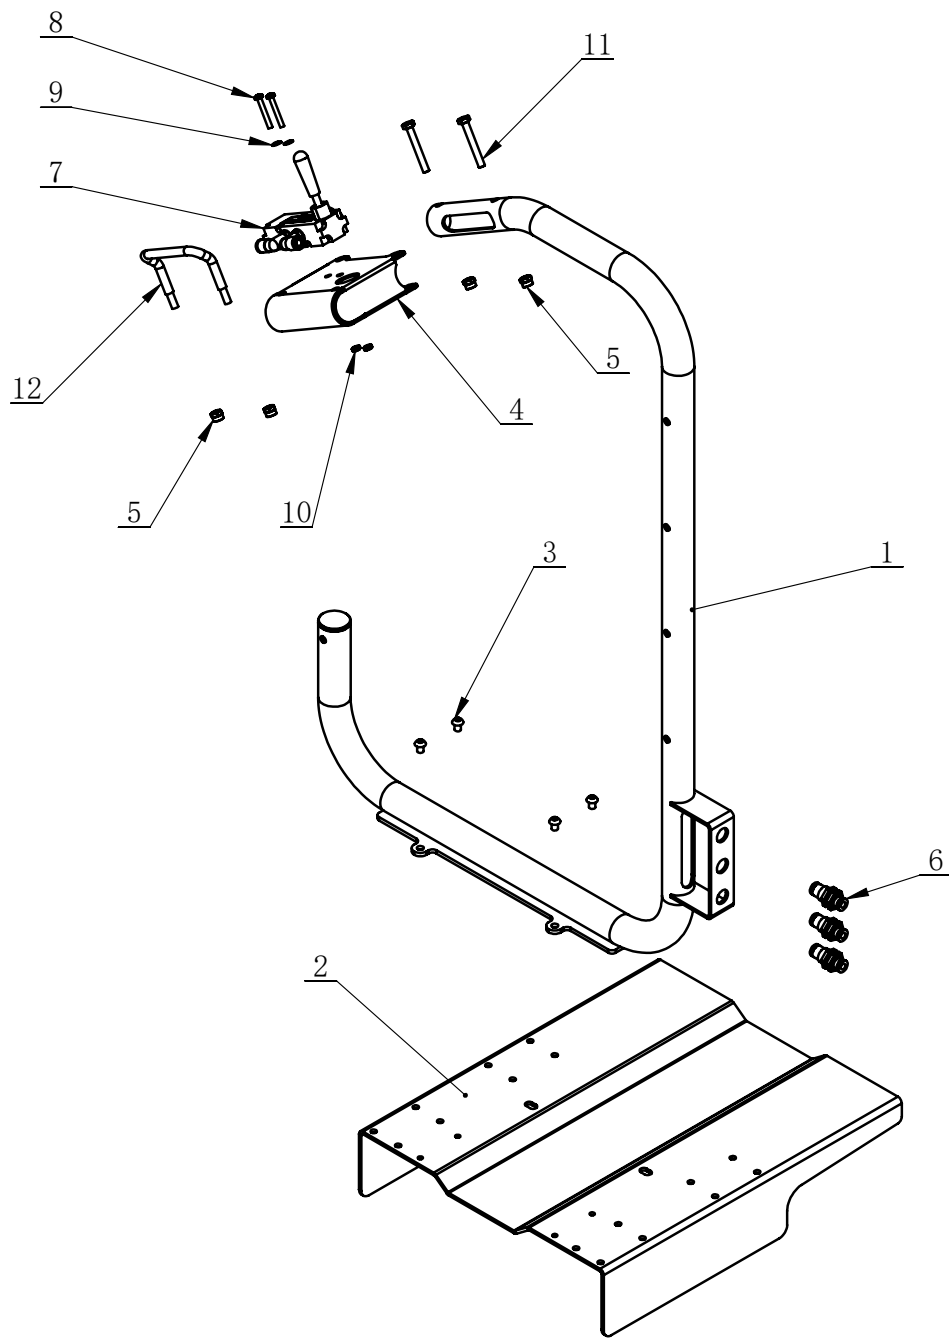


ITEM	PART. No	DESCRIPTION.	QT. Y
1	TB-J-0520100A	HANDLE WELD	1
2	TB-J-0520002A	SKATE PALLET	1
3	GB70. 2-M6×8	INNER HEXA CYLINDRICAL ROUND HEAD SCREW	4
4	TB-J-0520001CR	CONTORLER BOX	1
5	GB889. 1-M6	1-TYPE PREVAILING TORQUE TYPE HEXAGON LOCK NUT	4
6	TB-J-0530002	CONNECTOR	3
7	TB-J-0520300	HAND CONTROL VAVLE ASSEM	1
8	GB818-M4×30-H	CROSS PANHEAD SCREW	2
9	GB95-4	FLAT WASHER	2
10	GB6170-M4	HEXANGULAR NUT 1-TYPE	2
11	GB5781-M6×45	HEXANGULAR BOLT	2
12	TB-J-0520002CR	HANDLEBAR	1

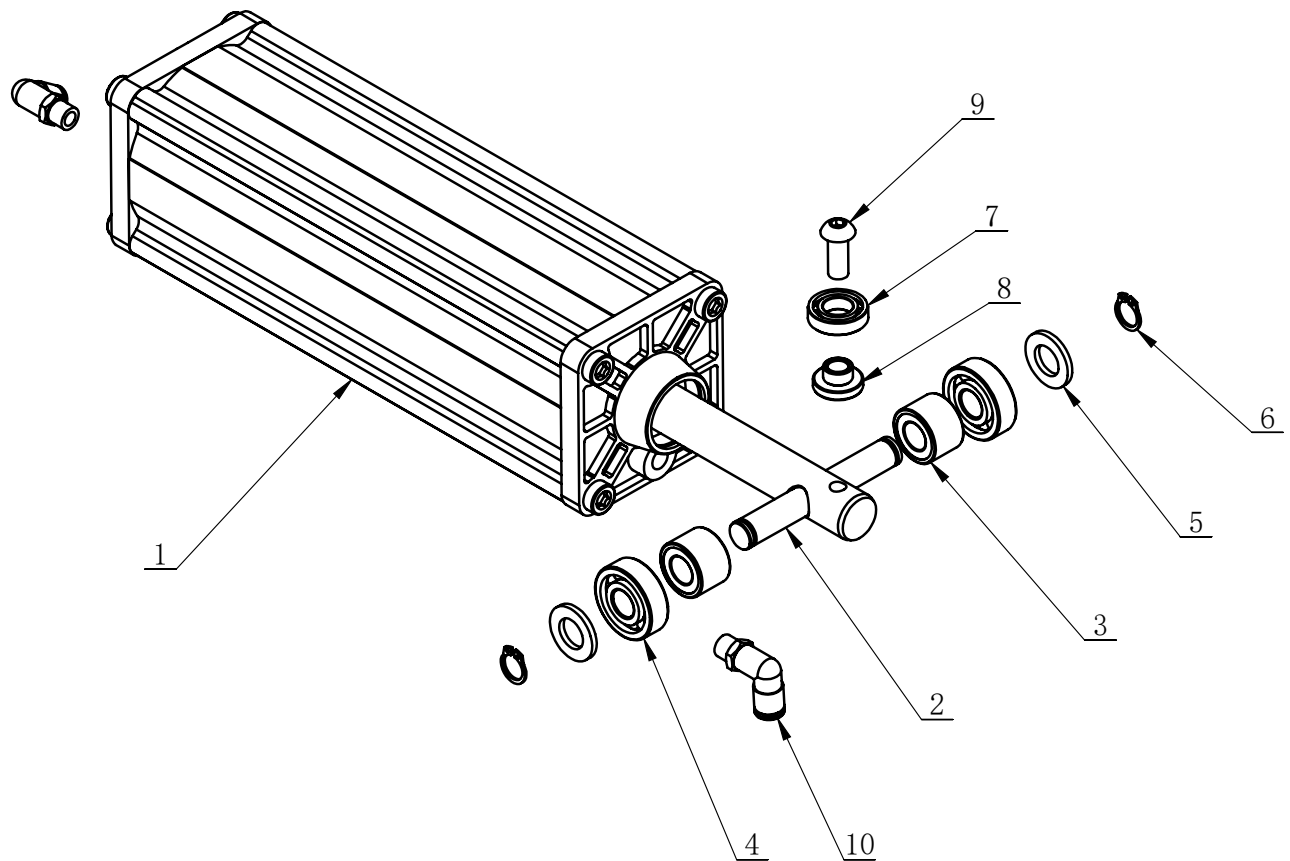


ITEM	PART. No	DESCRIPTION.	QT. Y
1	TB-J-0571000	AIR CYLINDER	1
2	TB-J-0570001	CONNECTION SHAFT	1
3	GB/T5801-1994-NKI12/16	SINGLE ROW NEEDLE ROLLER BEARING	2
4	GB276-6201	DEEP GROOVE BALL BEARINGS	2
5	GB95-12	FLAT WASHER	2
6	GB894. 1-12	SHAFT ELATIC BIG RETAINING RING A-TYPE	2
7	GB276-61901	DEEP GROOVE BALL BEARINGS	1
8	TB-J-0570002	SPACHER BUSH	1
9	GB70. 2-M8×20	INNER HEXA CYLINDRICAL ROUND HEAD SCREW	1
10	FPL 6-01	MALE ELBOW	2

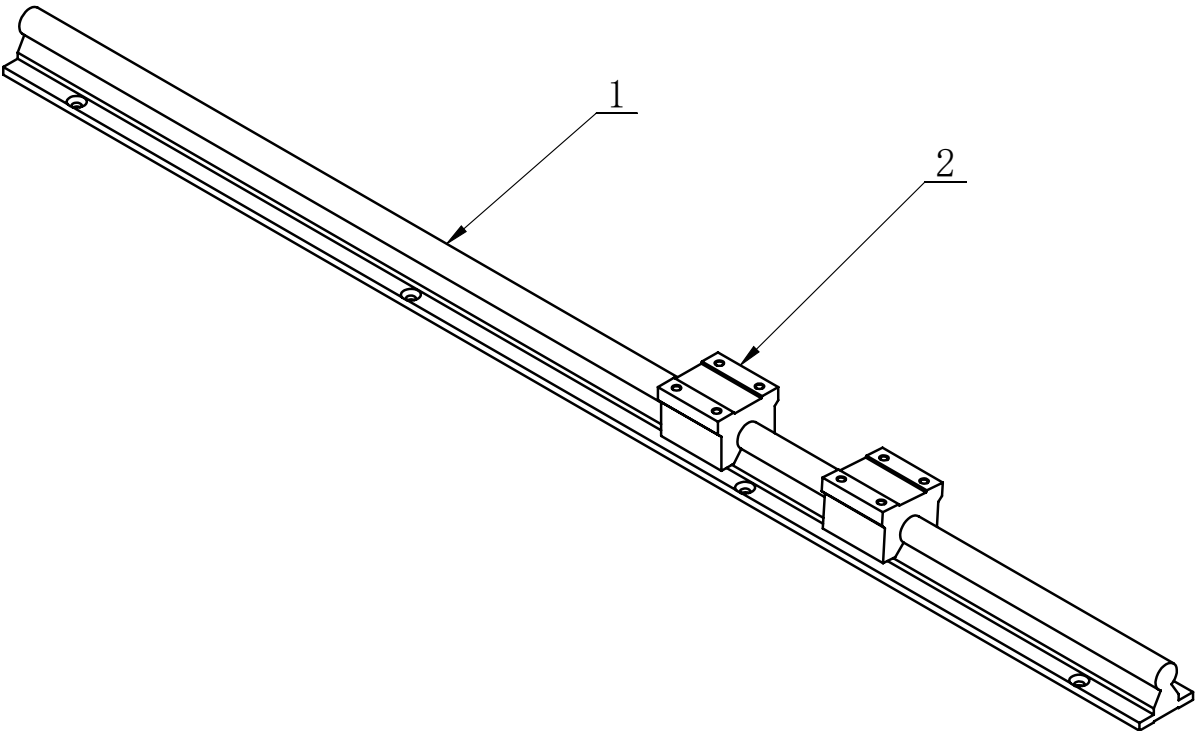


ITEM	PART. No	DESCRIPTION.	QT. Y
1	TB-J-0590001	RAIL	1
2	TB-J-0590002	SLIDE BEARING	2

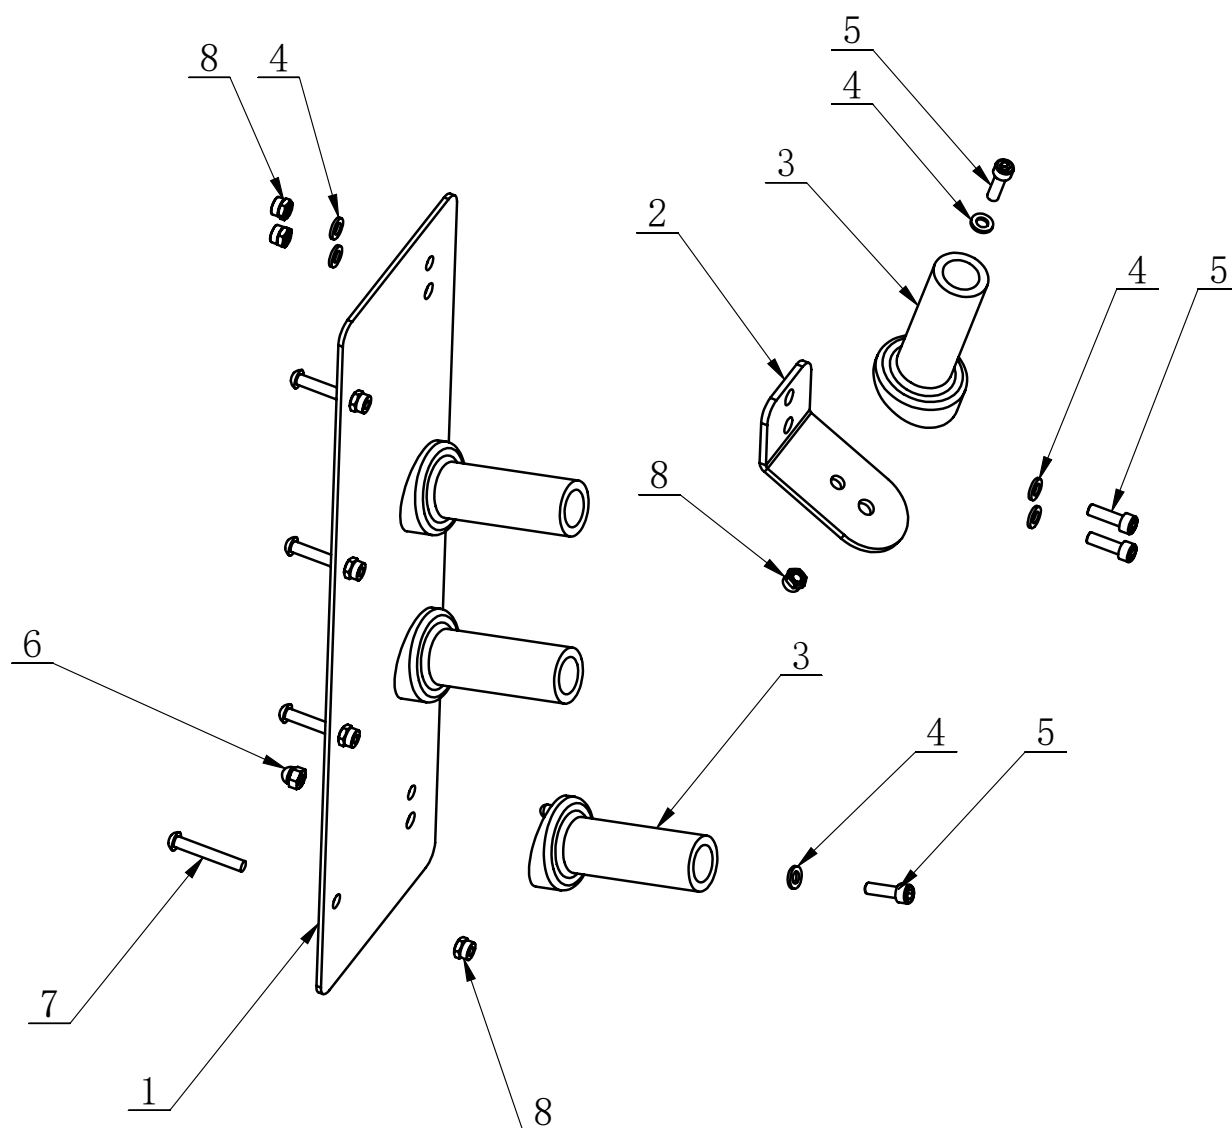



ITEM	PART. No	DESCRIPTION.	QT. Y
1	TB-J-0580002A	HANDLE PLATE	1
2	TB-J-0580001	HANGING BOARD	1
3	TB-S-0100009A	CONE HANG HANDLE	4
4	GB95-6	FLAT WASHER	8
5	GB70. 1-M6×20	INNER HEXA CYLINDRICAL SCREW	6
6	GB923-M6	CAP NUT	3
7	GB70. 2-M6×40	INNER HEXA CYLINDRICAL ROUND HEAD SCREW	4
8	GB889. 1-M6	1-TYPE PREVAILING TORQUE TYPE HEXAGON LOCK NUT	7

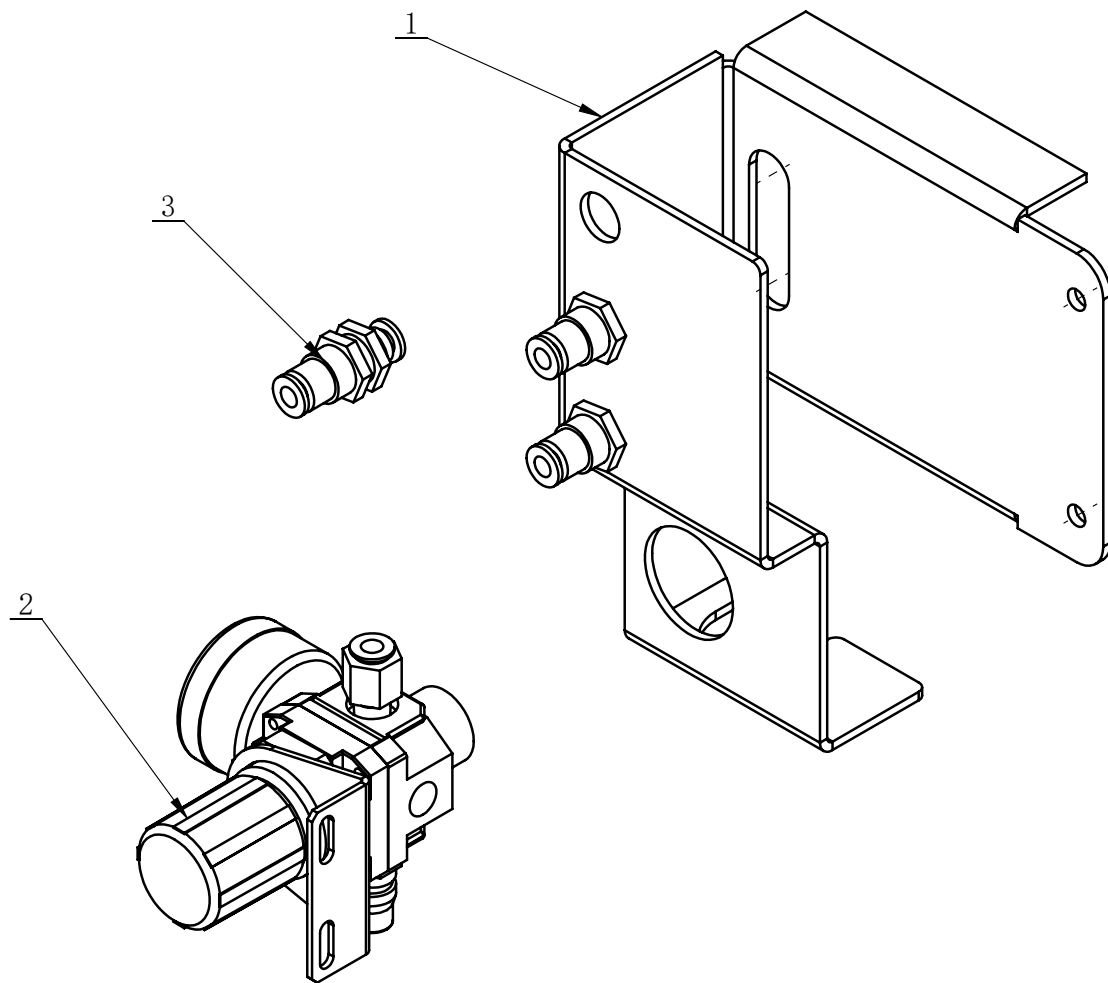

ITEM	PART. No	DESCRIPTION.	QT. Y
1	TB-J-0530001	REDUCING VALVE HOLDER	1
2	TB-J-0530100	ADJUSTING VALVE	1
3	TB-J-0530002	CONNECTOR	3

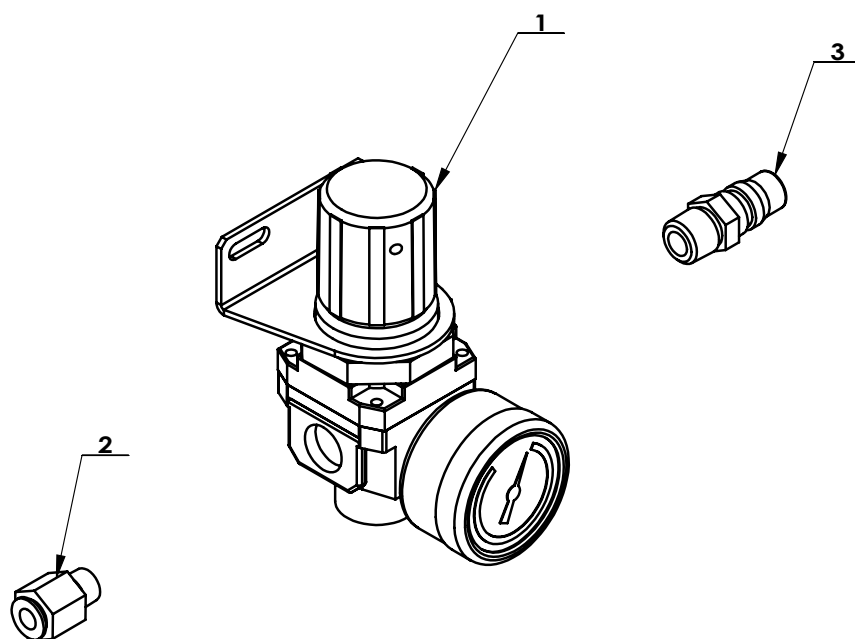

ITEM	PART. No	DESCRIPTION.	QT. Y
1	AR20-01. -A	ADJUSTING VALVE	1
2	FPC 6-02	MALE STRAIGHT	1
3	C-54-8000011	AIR SUPPLY CONNECTOR	1

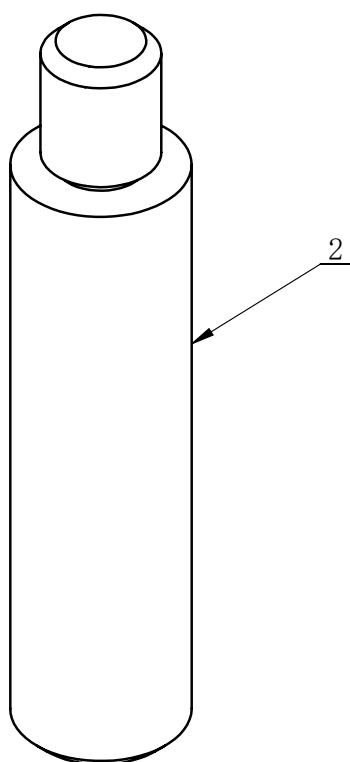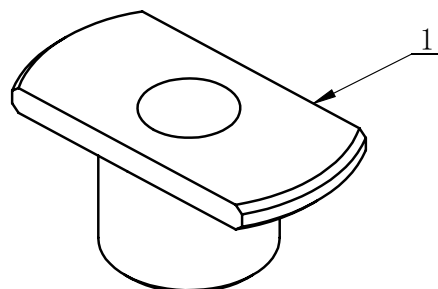

ITEM	PART. No	DESCRIPTION.	QT. Y
1	TB-J-0500101	WANSHER	1
2	TB-J-0500102	CONNECTION SHAFT	1