

W-PL230 Assist Arm Parts Manual 17





WEAVER
E Q U I P M E N T

Please read this manual before operation

PL230


Spare parts list

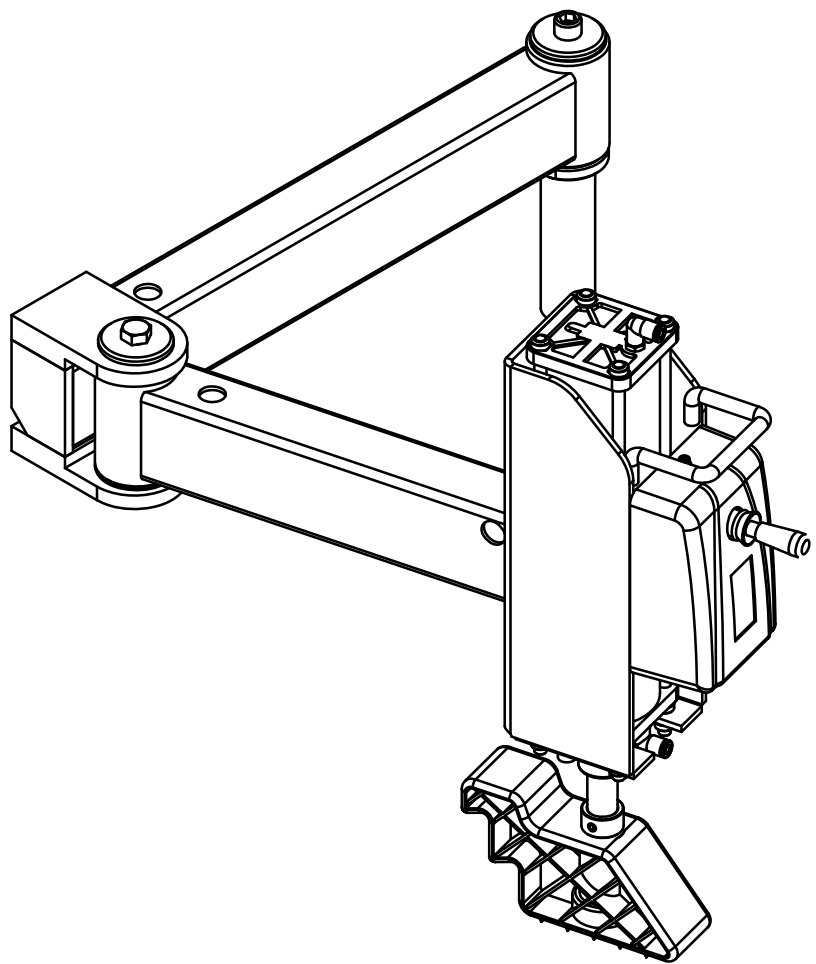

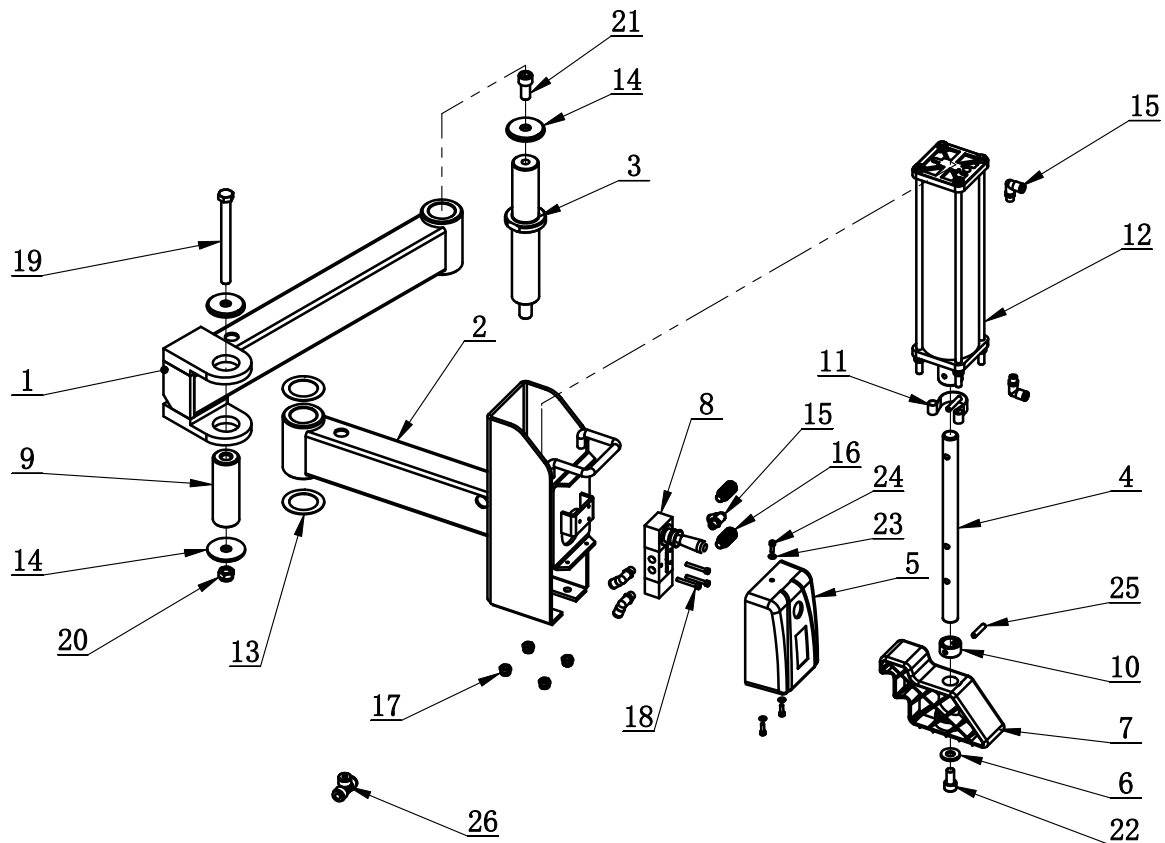

ITEM	PART. No	DESCRIPTION.	QT. Y
1	H-70-1100000	SWING ARM WELDING	1
2	H-70-1200000	PRESS ARM WELDING	1
3	H-70-1000001	ROCKER VERTICAL SHAFT	1
4	H-70-1000002	PRESS SHAFT	1
5	H-10-1000026	MANUAL VALVE COVER	1
6	H-10-1000007	WASHER	1
7	H-10-1000006	PRESS BLOCK	1
8	H-20-1000035	CONTROL VALVE	1
9	C-A1-3000003	SHAFT	1
10	C-A1-3000005	SLEEVE	1
11	C-A1-3500000	ADJUSTMENT PIN ASSEMBLY	1
12	C-A1-3400000	CYLINDER	1
13	C-54-1300013	ADJUSTING WASHER	2
14	TC-10-1300002	CIRCULAR GUIDERAIL WAHER	3
15	FPL 6-01	MALE ELBOW	5
16	FSK 01	PLASTIC PARTICLE SILENCER	2
17	GB889. 1-M8	1-TYPE PREVAILING TORQUE TYPE HEXAGON LOCK NUT	4
18	GB70. 1-M4×30	INNER HEXA CYLINDRICAL SCREW	3
19	GB5782-M12×135	HEXANGULAR BOLT	1
20	GB889. 1-M12	1-TYPE PREVAILING TORQUE TYPE HEXAGON LOCK NUT	1
21	GB70. 1-M12×25	INNER HEXA CYLINDRICAL SCREW	1
22	GB70. 1-M10×20	INNER HEXA CYLINDRICAL SCREW	1
23	GB95-4	FLAT WASHER	3
24	GB70. 1-M4×12	INNER HEXA CYLINDRICAL SCREW	3
25	GB879. 1-6×28	ELASTIC CYLINDRICAL PIN, HEAVY	1
26	FPT 6-8-8	DIFFERENT DIA OF UNION TEE	1

C-A1-3400000

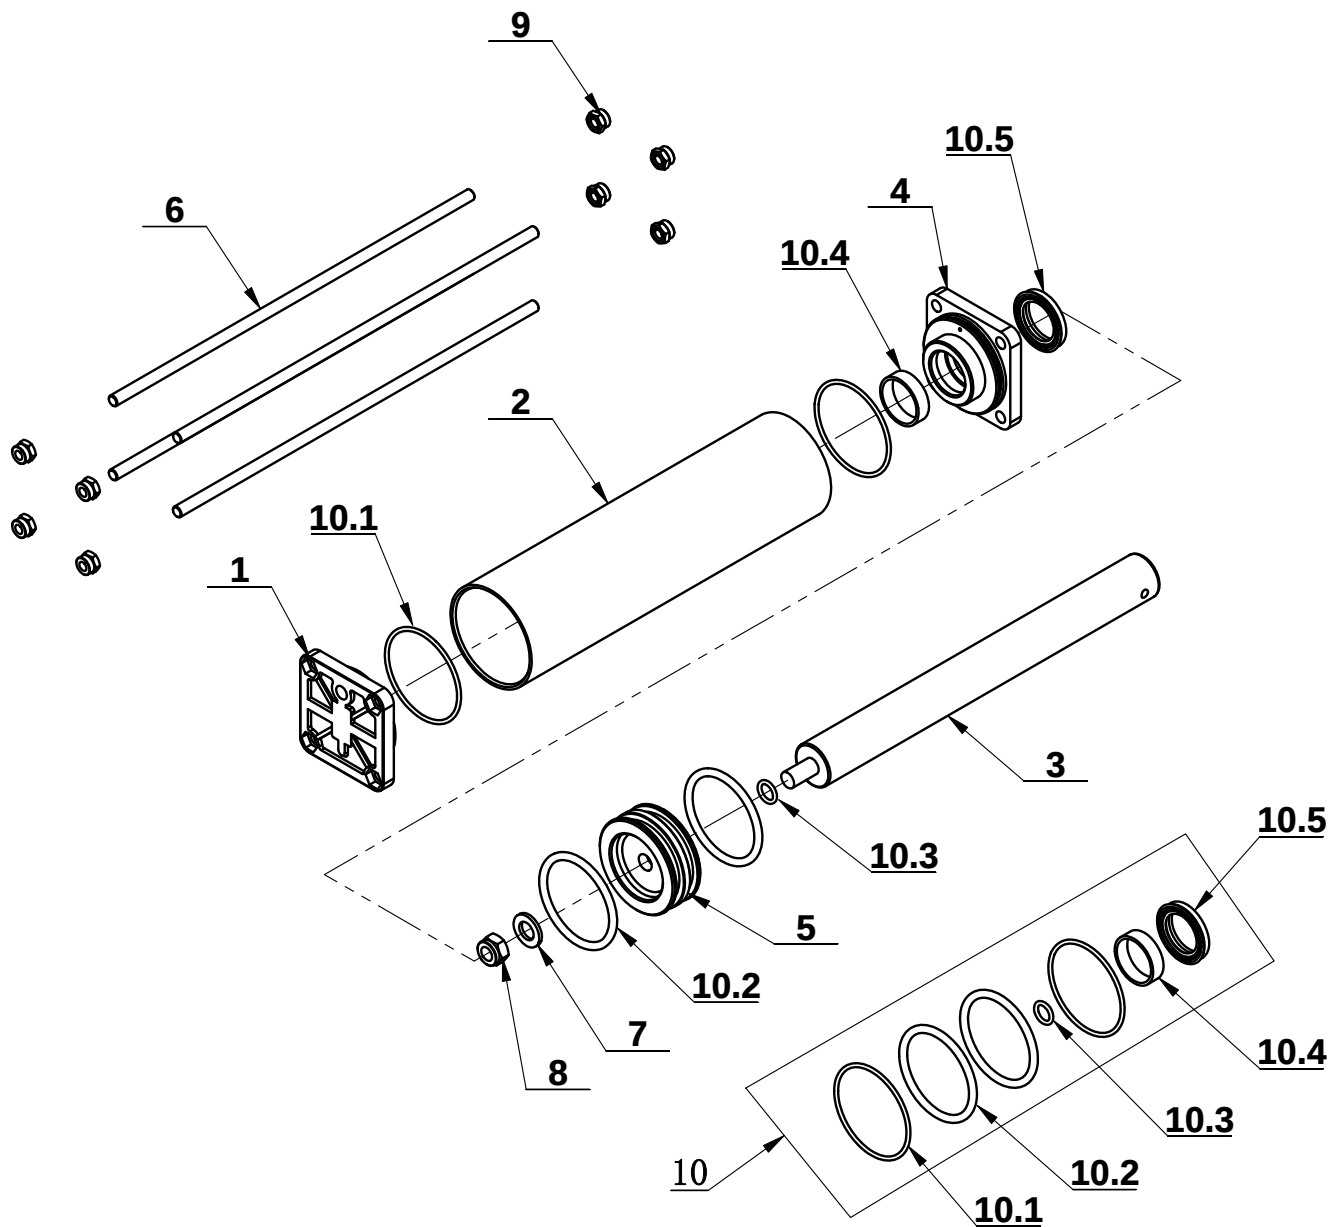

ITEM	PART. No	DESCRIPTION.	QT. Y
1	C-A1-1E40004	CAP-BASE, CYLNDR	1
2	C-A1-1E40002	CYLINDER HOUSING	1
3	C-A1-1E40003	PISTON ROD	1
4	C-A1-1E40005	THE FRONT COVER	1
5	C-A1-1E40008	PISTON	1
6	C-A1-1E40001	SCREW	4
7	GB95-12	FLAT WASHER	1
8	GB889. 1-M12	1-TYPE PREVAILING TORQUE TYPE HEXAGON LOCK NUT	1
9	GB889. 1-M8	1-TYPE PREVAILING TORQUE TYPE HEXAGON LOCK NUT	8
10	C-A1-3400000M	SEAL COMPONENTS	1
10. 1	GB3452. 1-65×2. 65-G	HYDRAULIC-PNEUMATIC RUBBER O-RING G TYPE	2
10. 2	GB3452. 1-60×5. 3-G	HYDRAULIC-PNEUMATIC RUBBER O-RING G TYPE	2
10. 3	GB3452. 1-11. 8×2. 65-A	HYDRAULIC-PNEUMATIC RUBBER O-RING A TYPE	1
10. 4	C-A1-1E40007	WEAR RING	1
10. 5	C-A1-1E40006	DUST RING	1